

SVEN[®]

Portable Speaker System
with FM-radio

USER MANUAL



PS-60

www.sven.fi

Congratulations on your purchase of the SVEN speaker system!**COPYRIGHT**

© 2020. SVEN PTE. LTD. Version 1.0 (V 1.0).

This Manual and information contained in it are copyrighted. All rights reserved.

TRADEMARKS

All trademarks are the property of their legal holders.

NOTICE OF RESPONSIBILITY RESTRICTION

Despite the exerted efforts to make this Manual more exact, some discrepancies may occur. The information in this Manual is given on «as is» terms. The author and the publisher do not bear any liability to a person or an organization for loss or damage which has arisen from the information contained in this Manual.

BUYER RECOMMENDATIONS

- Unpack the device carefully. Make sure there are no accessories left in the box. Check up the device for damage; if the product was damaged during transportation, address the firm which carried out the delivery; if the product functions incorrectly, address the dealer at once.
- Check up the package contents and availability of the warranty card. Make sure the warranty card has a shop stamp, a legible signature or the seller's stamp and purchase date, and the goods number corresponds to that in the warranty card. Remember: in case of warranty card loss or discrepancy of numbers you forfeit the right for warranty repairs.
- Before installing and using the speaker system, read this manual carefully and keep it for future reference.
- Shipping and transportation equipment is permitted only in the original container.
- Does not require special conditions for realization.
- Dispose of in accordance with regulations for the disposal of household and computer equipment.

PACKAGE CONTENTS

- Speaker system — 1 pc
- USB to miniUSB power cable — 1 pc
- Carrying strap — 1 pc
- Li-Ion battery BL-5C (3.7V, 600mA*h) — 1 pc
- User Manual — 1 pc
- Warranty card — 1 pc

APPLICATION

PS-60 multimedia speaker system is designed to play music. There is a built in high-quality broadband speaker, FM-tuner, MP3-player, micro SD memory card slot and USB port for connecting a USB drive.

SPECIAL FEATURES

- LED display
- Headphones jack
- Built-in player with USB flash and with micro SD memory card
- Built-in FM tuner
- Flashlight

Technical support is on www.sven.fi.

Description

- ① Previous track (in Player mode);
Next station (in Radio mode);
Time settings
- ② Play/Pause button (in Player mode);
MUTE (short pressing in Radio mode);
Start/Stop auto scan (long pressing in Radio mode);
Exit the Time setting mode
- ③ Next track (in Player mode);
Next station (in Radio mode);
Time settings
- ④ M/⌂: switching modes button: Radio / Player / Clock (short pressing);
Repeat mode selection (long pressing in Player mode);
Enter the Time settings mode (long press in the Clock mode)
- ⑤ : light on/off button
- ⑥ Display
- ⑦ 0-9: numeric pad to enter the station number or track number
- ⑧ USB-flash card slot
- ⑨ TF: micro SD card slot
- ⑩ On/Off power switch
- ⑪ Headphones jack
- ⑫ USB: mini USB jack for charger connecting, the USB port of laptop/PC
- ⑬ Volume control knob

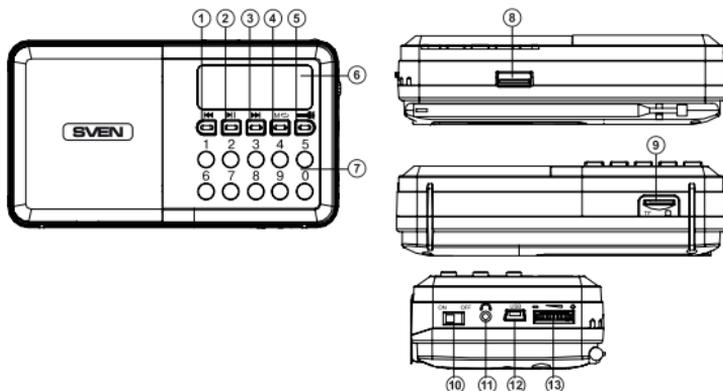


Fig. 1. Description

CONNECTION AND OPERATION

Attention! The built-in battery must be charged completely prior to the application.

Battery charging

• Connect speaker system to a USB port of PC or USB charger using miniUSB to USB cable (included). When charging, the battery indicators   flash alternately. When the battery is fully charged, the battery indicator lights up .

Attention! Instead of the BL-5C battery (included), you can use AA batteries (3 pcs.) (not included). Observe the polarity when installing them.

OPERATION MODES**Radio mode**

• Turn on the speaker system – press button  several times until, the radio mode will not turn on. Long-term pressing button  activates auto search mode. After scanning completion, the first scanned radio station will start to operate automatically. With buttons  and  select a desired radio station.

Player mode

Attention! The file system of a micro SD carrier is FAT32. Maximum volume is 32 GB. It is not recommended to use the micro SD Ultra Speed.

• The system will enter the Player mode automatically when a carrier (USB flash or SD card) is connected to corresponding ports. Use button  to switch between Play/Pause modes. You can control tracks by using buttons  (previous track) and  (next track).

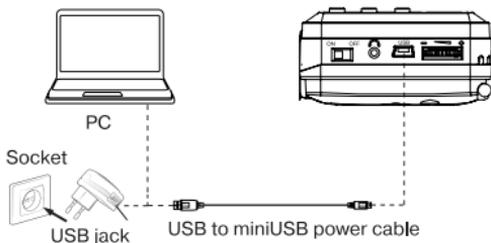


Fig. 2. Connection diagram

TECHNICAL SPECIFICATIONS

Parameter, measurement unit	Value
Frequency range, Hz	120 – 20 000
Output power (RMS), W:	3
Speaker diffuser diameter, mm	Ø 50
Battery capacity, mA*h	600
Power supply	lithium-ion battery, mAh – 1200/USB  5V
Weight, kg	0.21
Dimensions, mm	127 × 73 × 36

Notes:

- *Technical specifications given in this table are supplemental information and cannot give occasion to claims.*
- *Technical specifications and package contents are subject to change without notice due to the improvement of SVEN production.*

Portable Speaker System with FM-radio

SVEN®



Model: PS-60

Импортер в России: ООО «Регард», 105082, г. Москва, ул. Фридриха Энгельса, д.75, стр. 5.
Уполномоченная организация в России: ООО «РТ-Ф», 105082, г. Москва, ул. Фридриха Энгельса, д. 56, стр. 1. Условия гарантийного обслуживания смотрите в гарантийном талоне или на сайте www.sven.fi.
Гарантийный срок: 12 мес.

Срок службы: 2 года.

Производитель: «СВЕН ПТЕ. Лимитед», 176 Джу Чиат Роуд, № 02-02, Сингапур, 427447.
Произведено под контролем «Свен Скандинавия Лимитед», 48310, Финляндия, Котка, Котolahdentie, 15. Сделано в Китае.

Manufacturer: SVEN PTE. LTD, 176 Joo Chiat Road, № 02-02, Singapore, 427447.

Produced under the control of Oy Sven Scandinavia Ltd. 15, Kotolahdentie, Kotka, Finland, 48310. Made in China.

® Registered Trademark of Oy SVEN Scandinavia Ltd. Finland.



PS-60