

ИНСТРУКЦИЯ

- На пульте ДУ откройте батарейный осек и вставьте прилагаемые батарейки, как показано на рисунке.
- Вставьте розетку со встроенным приёмником в розетку. Индикатор начнёт мигать раз в секунду.
- Выберите номер кнопки ON, на которую хотите запомнить включение/выключение приёмника с розеткой. Нажмите на эту кнопку и держите её примерно 2 секунды. Индикатор начнёт мигать, потом погаснет. Это значит, что приёмник настроен на включение этой кнопкой ON и на выключение соответствующей ей кнопкой OFF.
- Повторите эту операцию для каждой розетки с приёмником, которой Вы хотите управлять с пульта ДУ.
- Если было прекращении питания розетки с приёмником, то операцию по запоминанию кнопок нужно повторить.

ЭКСПЛУАТАЦИЯ

- Подключите устройство, которое Вы хотите включать дистанционно в приёмник с розеткой.
- Настройте ДУ клавишами ON/OFF
- Включение/выключение производится клавишами ON/OFF

ВОЗМОЖНЫЕ НЕИСПРАВНОСТИ


- Если приёмник не реагирует на кнопку, то это может быть из-за: Низкого заряда батарей. Замените батарейки.
Расстояние до приёмника слишком далеко
Слишком быстрого нажатия на кнопку.
Время нажатия на кнопку должно быть 2 сек.

КАК СНЯТЬ НАСТРОЙКУ КНОПОК

- Нажмите ON/OFF на 3 секунды. Когда индикатор на приёмнике часто мигает, это будет означать, что настройка данной кнопки снята.
- Нажмите ON/OFF на 3 секунды для всех приёмников с розеткой, чтобы снять настройку с каждого из них.

ТЕХНИЧЕСКИЕ ХАРАКТЕРИСТИКИ

Напряжение	230В~ / 50Гц
Мощность	230В/1000Вт максимум
Макс. рассеиваемая энергия	55 Дж
Количество кодов	Более 1 млн.
Частота передатчика	433.92 МГц
Дальность	20 Мг
Установка кода	Запоминаемый
ON/OFF индикатор	LED
Тип батарейки	L1028 * 1-12V DC Alkaline

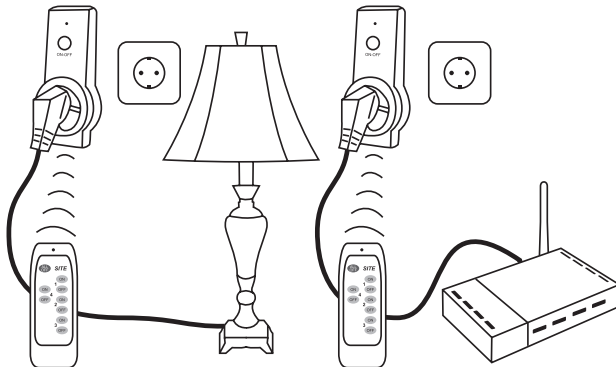

INSTRUCTION

- On the remote control, open the battery compartment and place the provided battery in the right position.
- Plug the receiver in a power plug, LED will light. And LED flashes one time per second.
- Press the ON switch (lasting more than 2 seconds) of your choice on the remote control. The receiver will then learn the code. When LED flashes continuously in 2 seconds and go out, it means the receiver learns the code successfully.
- Repeat these last two operations for all receivers selecting a different ON button for each receiver.
- When power cut or pull out the receiver from a power plug, you should repeat all the setting above.

OPERATION

- Plug the device you want to remotely operate in a receiver.
- Press the corresponding ON or OFF button of the remote control to operate the plug or
- Press the direct ON/OFF switch on the receiver to operate the plug.

TROUBLE SHOOTING

- If a receiver does not react to the remote control operation it can be due to :
- Low battery in the remote control – Replace it.
- Distance too large between the remote control and the receiver
- The pressing time on the buttons must be at least 2 seconds

HOW TO DECODE

- Press ON/OFF switch on receiver and last for 3 seconds. After the LED flashes from quickly to once per second, decoding is successful.
- Press ALL OFF switch on remote control and last for 3 seconds. After the LED flashes from quickly to once per second, decoding is successful.

TECHNICAL SPECIFICATION

Voltage	230Vac~ / 50Hz
Rating	230Vac / 1000W max.
Max rating energy	55 J
Learning code	More than 1 million
Remote Frequency	433.92MHz
Remote Range	20 Meter
Code setting	Learning
ON/OFF Indicate	LED
Battery Type	L1028 * 1-12V DC Alkaline

